



Furled Leader Making Jig

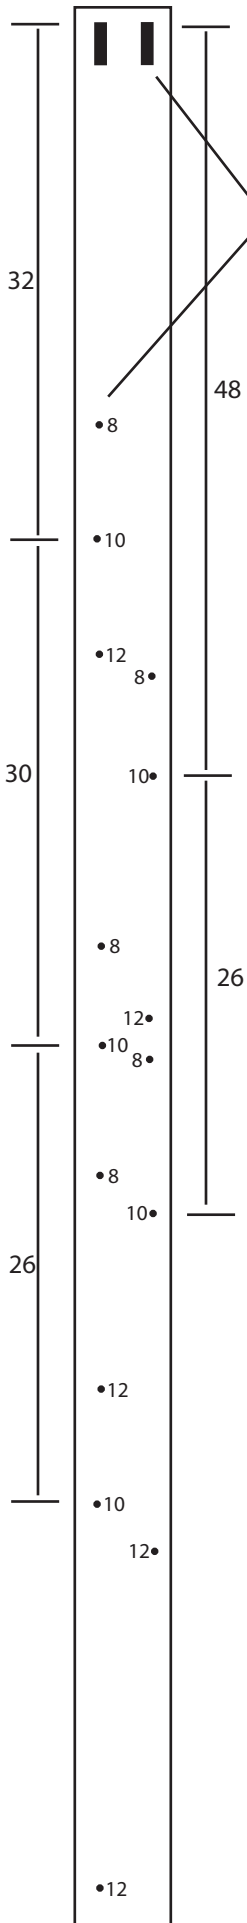

hooks
dowel pin location

Material List

- 1" x 4" x 10ft wood board
- 15 wood screws
- 2 screw hooks.
- 5 1" x 4" dowel rods

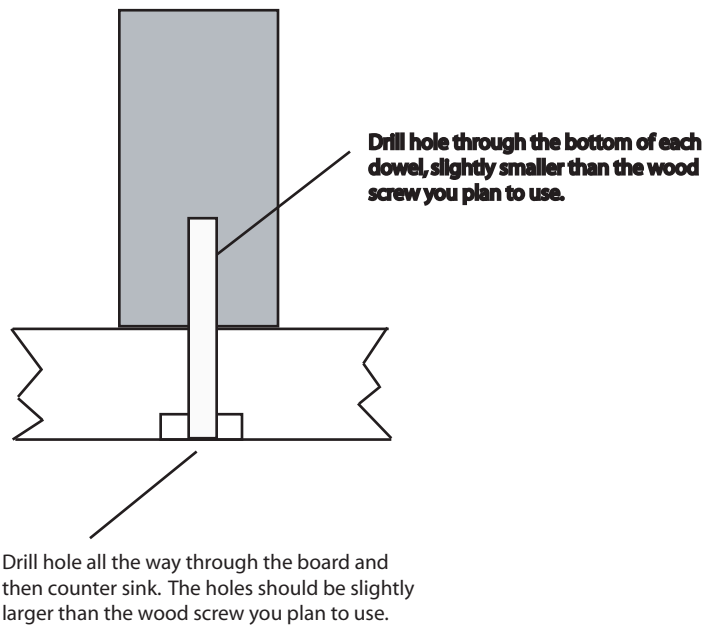

Measurements for 10ft leaders from cuphooks to dowel centers are on the left and right sides of the board. This units are in inches. Screw holes are marked with a dot to indicate where holes should be drilled for the appropriate length dowel rod. The digram is for illustration only and should not be used for a drilling guide. Below are the measurements for 8ft, 10ft, and 12ft leaders. Instuctions for making a fureled leader can be found by doing a word search on the interent using "furled leader." Please observe safe power tool usage when drilling holes for this jig.

8R	8L	10R	10L	12R	12L
42	28	48	32	62	40
64	54	74	62	96	80
	72		88		112

After jig has been assembled, dowels can be moved to the proper location for making the desired length leader.